


- 1 Force Moves into Floor Framing
- 2 Into Shear Transfer Ties
- 3 Into Upper Top Plate
- 4 Into Nails at Top of Plywood
- 5 Down Through the Plywood
- 6 Into Nails at Bottom Plywood
- 7 Into Mud sill
- 8 Into Bolts
- 9 Into Foundation

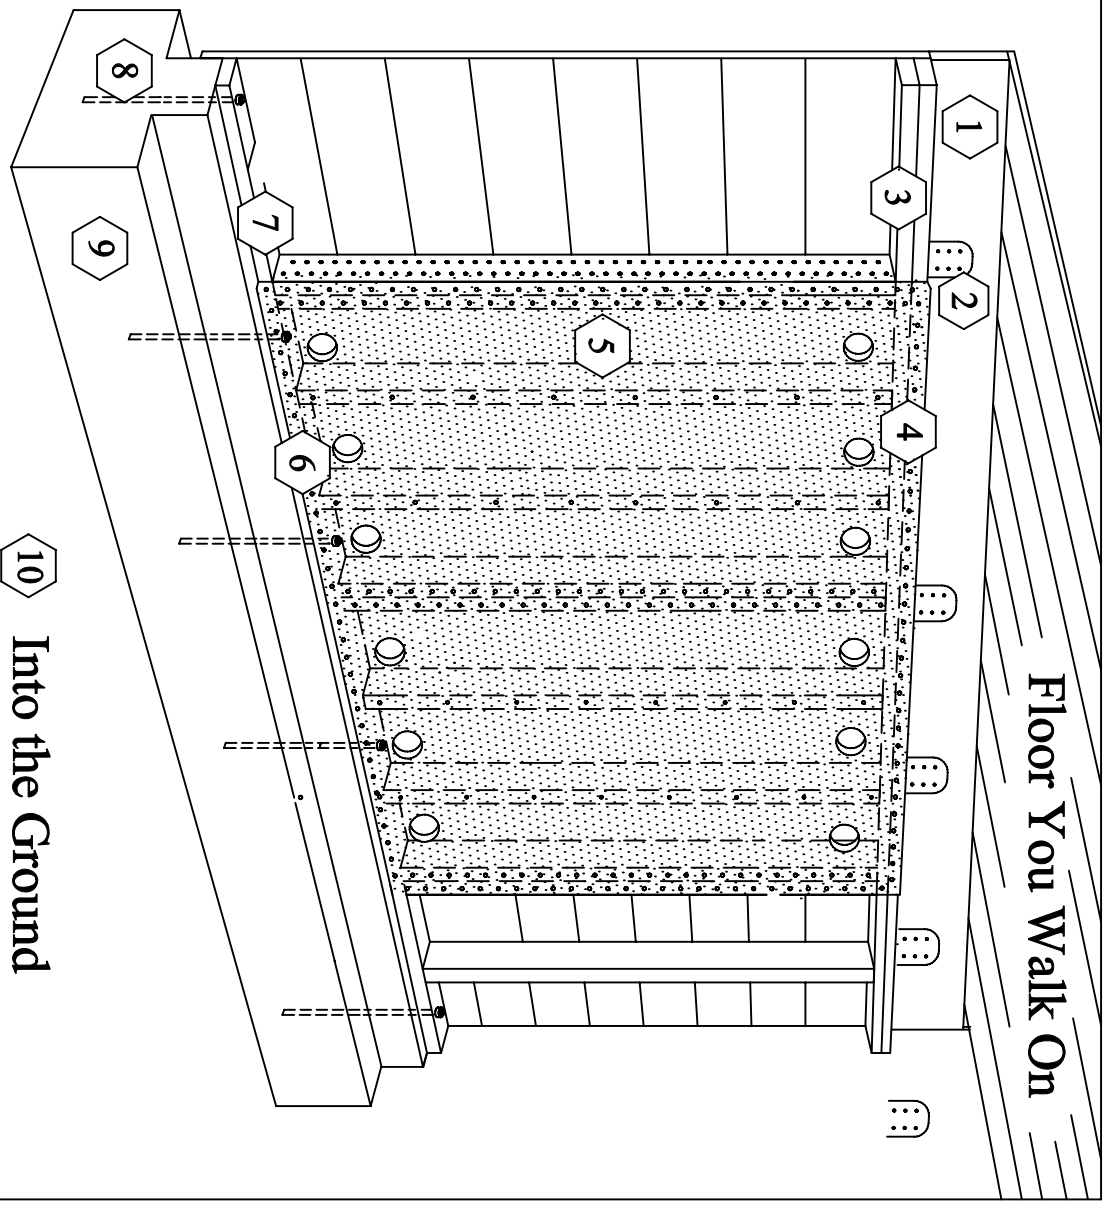

# Load Path of Earthquake Forces